 




OPERATION GUIDE

How to connect the remote controller (pairing)  
1. Pairing must be made within 1 minute after supplying power (insert AAA batteries into remote control first).  
2. Press and hold the Stop button for at least 3 seconds.  
3. Pairing is completed when you hear a "beep" buzzer and the remote control LED is on.

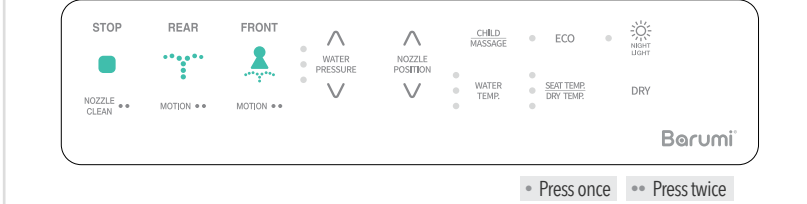

**STOP**  
\* Press once: to stop the operation.  
\*\* Press twice: to operate automatic nozzle cleaning function.

**REAR**  
\* Press once: for rear cleaning.  
\*\* Press twice: for nozzle oscillating movement for massaging effect.  
Press again to stop cleaning function.

**FRONT**  
\* Press once: for front cleaning for ladies.  
\*\* Press twice: for nozzle oscillating movement for massaging effect.  
Press again to stop cleaning function.

**CHILD/MESSAGE**  
\* Press once: child mode.  
Child mode provides 30 seconds of wash and 1 minute of dry.  
\*\* Press twice: for massaging effect.  
Massaging with water helps you with bowel movements.

**ECO**  
Minimizes power use by adjusting water temp., seat temp., and dry air temp.  
\* Press once: for LEVEL 1: When the product is not in use, water temp. and seat temp. remains at standard economy mode.  
\*\* Press twice: for LEVEL 2: When the product is not in use, water temp. and seat temp. remain at extra economy mode.

**WATER PRESSURE**  
3 levels of water pressure  
**WATER TEMPERATURE**  
3 levels of water temperature  
Press 4th time to turn off.  
**SEAT TEMP. / DRY TEMP.**  
3 levels of seat and air dry temperature  
Press 4th time to turn off.

**NIGHT LIGHT**  
Press the button to light up the bidet seat at night.  
**DRY**  
Press to activate air dryer.

MAINTENANCE

HOW TO CLEAN THE PRODUCT

 
**1. Cleaning the exterior part of the bidet toilet seat**  
Wipe the exterior part of the bidet with a soft sponge or cloth soaked with neutral detergent. Do not use hydrochloric detergent, thinner, benzene, lubricant, sandpaper, or insecticide, etc. as it may cause damage to your bidet.

**2. Spray wand cleaning (manual)**  
When the user is not seated, press the REAR button to eject the spray wand. Lightly wipe the spray wand with a soft sponge or a toothbrush soaked with dish soap. After cleaning, press the REAR button again or press the STOP button to restore the spray wand to its initial position.  
\* Do not bend or pull the spray wand with excessive force, as this may cause damage.

**3. Filter mesh cleaning (water supply must be shut off)**  
• Close the water supply valve and disconnect the flexible hose.  
• Clean the filter mesh at both sides of the hose with a brush.  
• Reconnect the flexible hose.

**4. Detaching the bidet toilet seat**  
To detach the bidet toilet seat, hold both sides and pull it forward while pressing the release button located on the right side of the unit.

**5. Clean thoroughly**  
Remove the bidet toilet seat and clean thoroughly.  
**6. Reattaching the bidet toilet seat**  
To reattach the bidet toilet seat, align the center of the unit with the center of the base bracket and slide the body backwards until you hear a "click" sound.

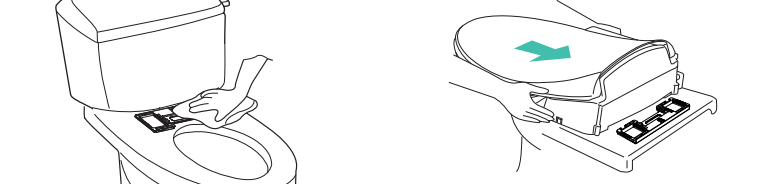

**CARING FOR YOUR BIDET IF YOU WON'T USE IT FOR A LONG TIME.**  
Please take these necessary steps to preserve your bidet during non-use.

**Drain the tank water and cut off the power**  
Scan QR Code to download the EF-BM-6000 User Manual for more details.  
**Winter Care (for cold climates)**  
• Your bidet should be connected to power even if you temporarily stop using the product.  
• Set the hot water temperature on the control panel to at least "Low".  
• This can help prevent the tank water from freezing.

TROUBLESHOOTING

If the product is not operating properly, please refer to the following possible solutions.

| Problem                 | Possible Cause(s)                                              | Solution                                                         |
|-------------------------|----------------------------------------------------------------|------------------------------------------------------------------|
| The unit is not working | Is the power turned off? Or is the circuit breaker turned off? | Wait until the power is restored, or turn on the circuit breaker |
|                         | Is the operation lamp on the lateral control panel turned off? | Plug the power cord into the electrical outlet                   |

| REAR / FRONT wash functions  |                                                             |                                                     |
|------------------------------|-------------------------------------------------------------|-----------------------------------------------------|
| Problem                      | Possible Cause(s)                                           | Solution                                            |
| Water pressure is weak       | Is the water pressure too low?                              | Increase the water pressure                         |
|                              | Is the strainer clogged?                                    | Clean the strainer                                  |
| Water is cold                | Is the temperature set too low or is the unit turned off?   | Adjust the water temperature on the control panel   |
|                              | Is it in Power-Save mode?                                   | Press the ECO button                                |
| Water spray stops during use | Cleaning stops 90 seconds after pressing REAR/FRONT buttons | Press REAR/FRONT again                              |
|                              | The seat sensor isn't detecting human contact               | Check the position of the seat sensor (refer to P9) |

| Heated seat               |                                                          |                                                  |
|---------------------------|----------------------------------------------------------|--------------------------------------------------|
| Problem                   | Possible Cause(s)                                        | Solution                                         |
| The seat does not warm up | Is the seat temperature set too low or is it turned off? | Adjust the seat temperature on the control panel |
|                           | Is the product in Power-Save mode?                       | Press the ECO button                             |


| Seat sensor                                                   |                                                    |                                                    |
|---------------------------------------------------------------|----------------------------------------------------|----------------------------------------------------|
| Problem                                                       | Possible Cause(s)                                  | Solution                                           |
| The REAR function operates without user detection on the seat | Is there water residue or a wet towel on the seat? | Wipe off the water residue or remove the wet towel |

| Power save                             |                                                       |                                                                          |
|----------------------------------------|-------------------------------------------------------|--------------------------------------------------------------------------|
| Problem                                | Possible Cause(s)                                     | Solution                                                                 |
| The Power-Save function is not working | Is the product unplugged? Or is the power turned off? | Reset the Power-Save mode by pushing the ECO button on the control panel |

**WARNING**

 The product should not be disassembled for repair. Please contact Barumi if the product is defective.

DISASSEMBLY PROHIBITED

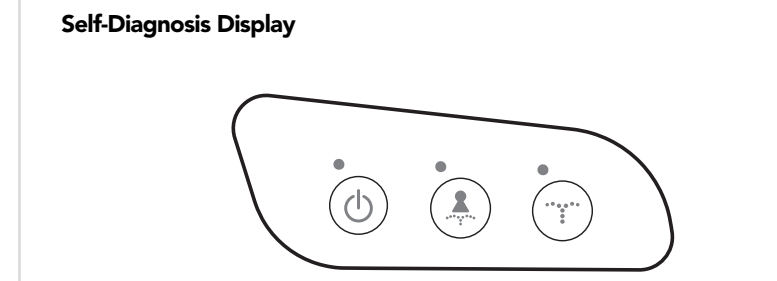

| Condition Displayed                                     | Cause                                   | Solution                                                                                                                                                                                                                                                                                                                                          |
|---------------------------------------------------------|-----------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| All 3 WATER PRESSURE lights blink simultaneously        | There is no water inside the water tank | 1. Press the REAR button to supply water<br>2. If all 3 WATER PRESSURE lights still blink 1 minute after the user presses the REAR button, it indicates that the water tank is still not filled up with water<br>3. If water is not supplied even when the water supply valve is opened, unplug the power cord from the socket and contact Barumi |
| All 3 WATER TEMP. lights blink, makes a "beeping" sound | Overheated water tank                   | Contact Barumi Support                                                                                                                                                                                                                                                                                                                            |
| 1 WATER TEMP. light blinks                              | Malfunction of water temperature sensor |                                                                                                                                                                                                                                                                                                                                                   |
| 3 SEAT LEVEL lights blink                               | Overheated seat                         |                                                                                                                                                                                                                                                                                                                                                   |
| 1 SEAT LEVEL light blinks                               | Malfunction of seat temperature sensor  |                                                                                                                                                                                                                                                                                                                                                   |
| Both LEVEL1 and LEVEL2 ECO lights blink simultaneously  | Malfunction of AC input power source    |                                                                                                                                                                                                                                                                                                                                                   |

FCC COMPLIANCE STATEMENT

**This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:**  
(1) This device may not cause harmful interference, and  
(2) this device must accept any interference received, including interference that may cause undesired operation.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

**FCC Caution:** Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

**Industry Canada:**  
This device complies with Industry Canada licence exempt RSS standard(s). Operation is subject to the following two conditions:  
( 1 ) this device may not cause interference, and ( 2 ) this device must accept any interference, including interference that may cause undesired operation of the device.

**Canada, avis d'Industrie Canada (IC)**  
Cet appareil est conforme aux normes RSS exemptes de licence d'Industrie Canada. Son utilisation est soumise aux deux conditions:  
suivantes : (1) cet appareil n'engendre pas d'interférences, et (2) cet appareil doit tolérer tout type d'interférences, notamment les interférences pouvant provoquer une utilisation non désirée de l'appareil.

SPECIFICATIONS

|                    |                                         |                                         |
|--------------------|-----------------------------------------|-----------------------------------------|
| Model              | EF-BM-6000 MFG Model: DB-5600           |                                         |
| Electrical ratings | AC 120V / 60Hz / 1260W                  |                                         |
| Water pressure     | 10 - 106 psi                            |                                         |
| Wash               | REAR                                    | Max 20.28 fl. oz/min                    |
|                    | FRONT                                   | Max 18.59 fl. oz/min                    |
| Water tank volume  | 6.93 fl. oz                             |                                         |
|                    | Low 91.4°F, Medium 96.8°F, High 102.2°F |                                         |
| Dry                | Air temperature                         | Room temperature to 131°F               |
|                    | Heater capacity                         | 150W                                    |
| Heated seat        | Seat temperature                        | Low 91.4°F, Medium 96.8°F, High 102.2°F |
|                    | Safety device                           | Thermal fuse                            |
| Product dimensions | 20.6"(L) x 15.9"(W) x 7"(H)             |                                         |
| Product weight     | 8.59 lbs                                |                                         |

WARRANTY

**PRODUCT WARRANTY CARD**

- We warrant our products to be free from manufacturing defects under normal use and service for a period of one (1) year from the date of purchase. This warranty is provided to the original purchase and cannot be transferred. If the product is used for business and/or commercial purposes, the warranty period changes to 6 months.
- If the product has a defect, please contact Barumi.

|                   |  |                 |                         |
|-------------------|--|-----------------|-------------------------|
| Product Name      |  | Model Number    |                         |
| Date of Purchase  |  | Serial Number   |                         |
| Name of Purchaser |  | Warranty Length | 1 year limited warranty |

Barumi 1500 N. Western Blvd. Suite 280, Denton, TX 76207 **888-577-8999**

**Barumi**  
barumiusa.com

# USER MANUAL

**EF-BM-6000**

**TABLE OF CONTENTS**

|                        |    |                          |    |
|------------------------|----|--------------------------|----|
| Safety Instructions    | 1  | Maintenance              | 11 |
| Before You Begin       | 4  | Troubleshooting          | 13 |
| Installation Procedure | 5  | FCC Compliance Statement | 16 |
| Parts Names            | 9  | Specifications           | 17 |
| Compatibility Guide    | 9  | Warranty                 | 17 |
| Operation Guide        | 10 |                          |    |

- This product is solely intended for households or household-like environments.
- Read all instructions and guidelines thoroughly before installation.
- User should have access to this User Manual at all times during installation and operation.
- For product improvement, designs and specifications are subject to change without prior notice.

**MADE IN KOREA** • Made by Dobidos • Distributed by Easyflex